




Standard Open Mesh Floor Assembly Instructions

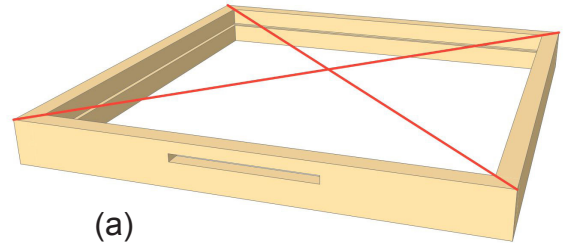

You will need:

A carpenters/joiners square.

A tape measure

A hammer (and punch if handy)

Waterproof PVA woodglue

A flat surface on which to work

1. First do a dry assembly understanding where each part fits and solving any issues before gluing.
2. Generously apply glue to the tenons and spread on all contact surfaces.
3. Assemble and slide in the mesh floor immediately.
4. **CHECK FOR SQUARE!!** Two checks are better than one so use a square on the internal right angles and then to double check measure both diagonals (a) from one corner to the opposite corner and if they are within a mm or two then the item is square.
5. Leave the entrance block loose and do not glue into place. The entrance block is designed to be pushed into place without glue.
6. Leave for 24 hours for glue to set. If that means moving the piece then remember to check for square again.