




www.peak-hives.co.uk

Standard National Floor Assembly Instructions

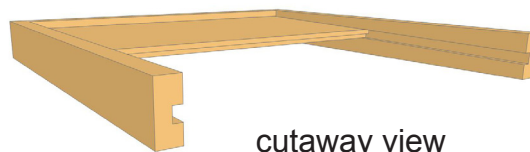

cutaway view

You will need:

A carpenters/joiners square.

A hammer (and punch if handy)

Exterior Wood Glue (we use polyurethane glue)

A flat surface on which to work



1. First do a dry assembly understanding where each part fits and solving any issues before gluing. If in doubt then please call Nick on 07594 583151.
2. Apply sufficient glue into the grooves in the sides.
3. Push the tongued and grooved boards into place (apply glue to the tongues where the boards overlap). Make sure that at the front of the floor you have fitted a board with a flush face and that it is up to the front of the groove.
4. Once one side is fitted with boards line up the other side with the boards and push home.
5. Make sure that all boards are tight up to each other and fit snugly into the grooves.
6. Check for square. Modern glues are likely to provide a sufficient bond but if you prefer you can drive some 50mm pins through the outside of the side rails through into the floor boards.
7. Glue and pin the rear timber slat into place.
7. Leave for 24 hours on a flat surface for glue to set.